


# OCKAM




## Matryx Display Quick Reference Guide

## Matryx Display Quick Reference Guide


### Add A Page

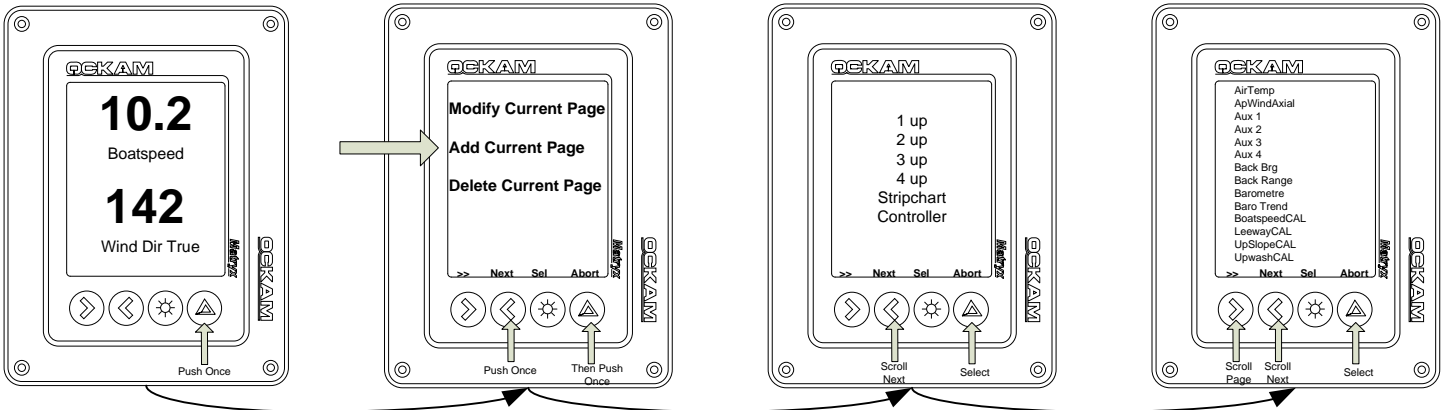

### Modify A Page

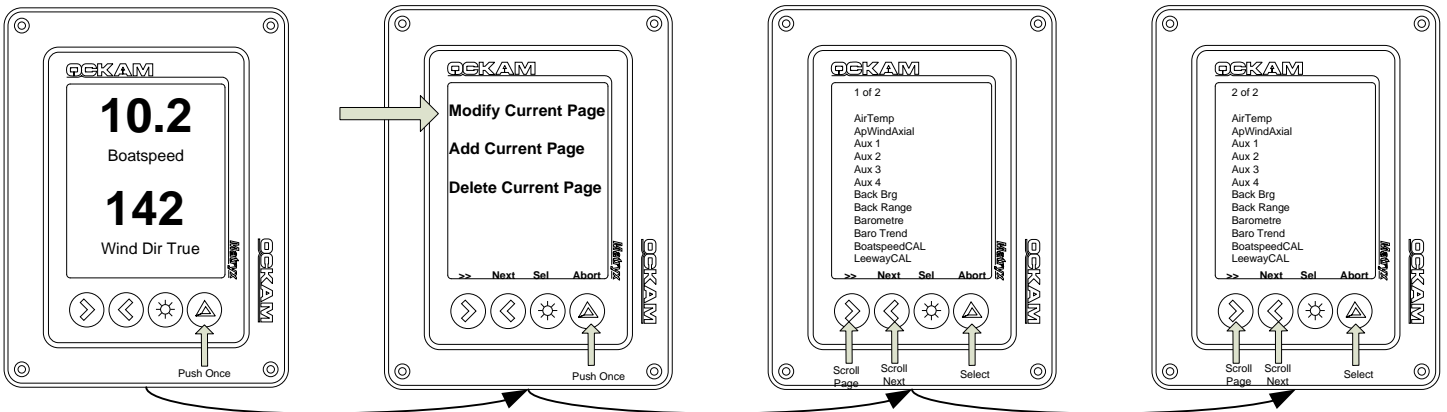


### Delete A Page

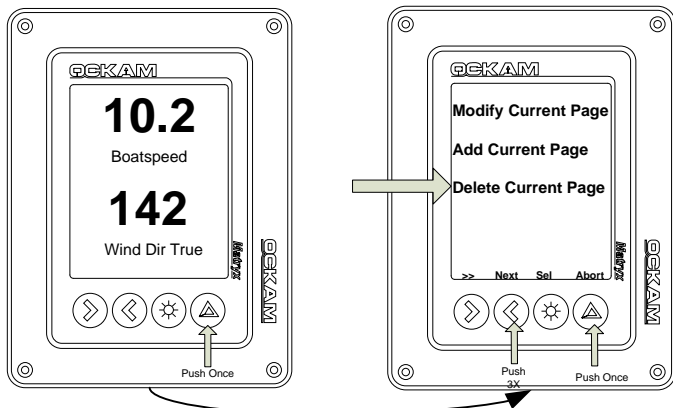




# Matryx Display Quick Reference Guide

## Add Stopwatch Page

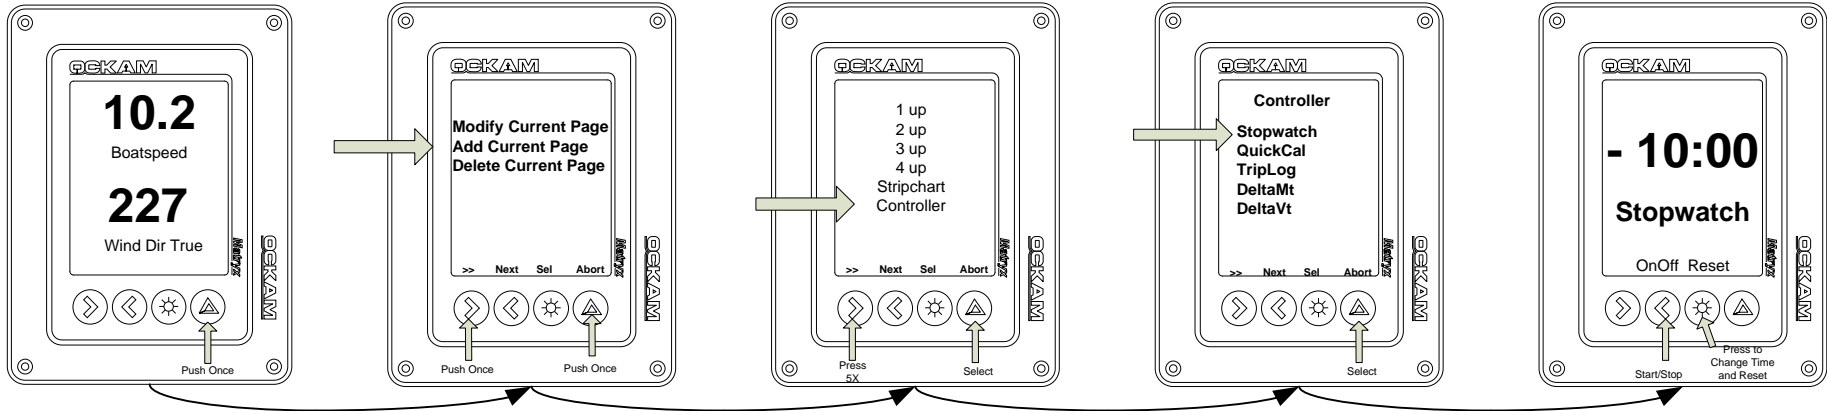


## Add Trip Log Page

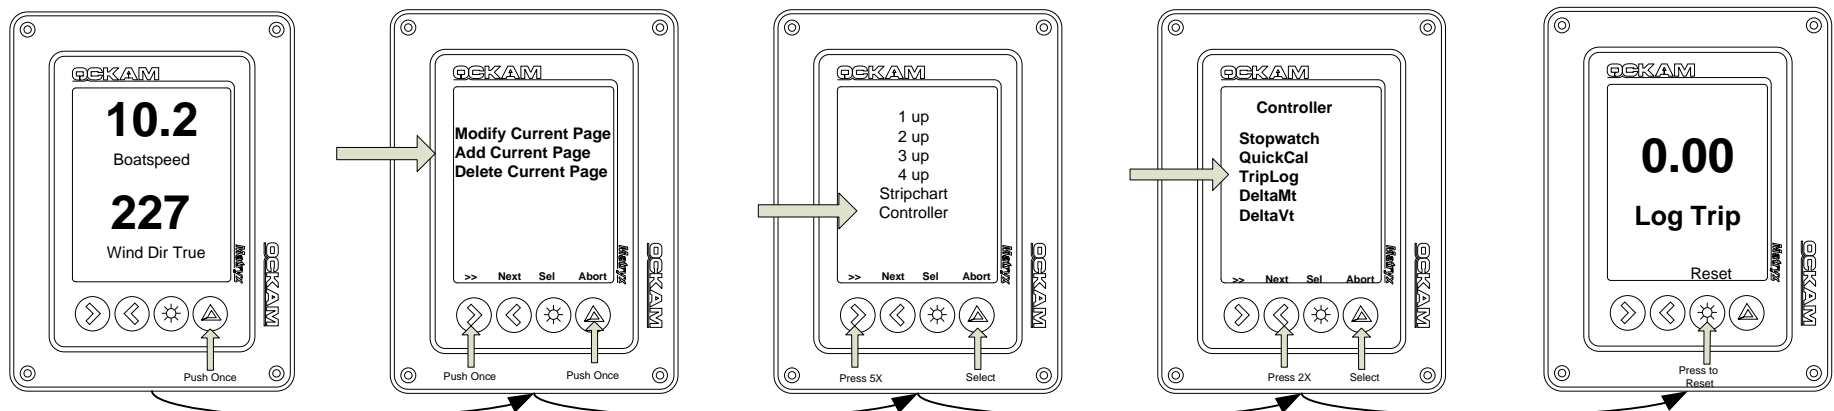



# Matryx Display Quick Reference Guide

## Set Averaging (Dampening)

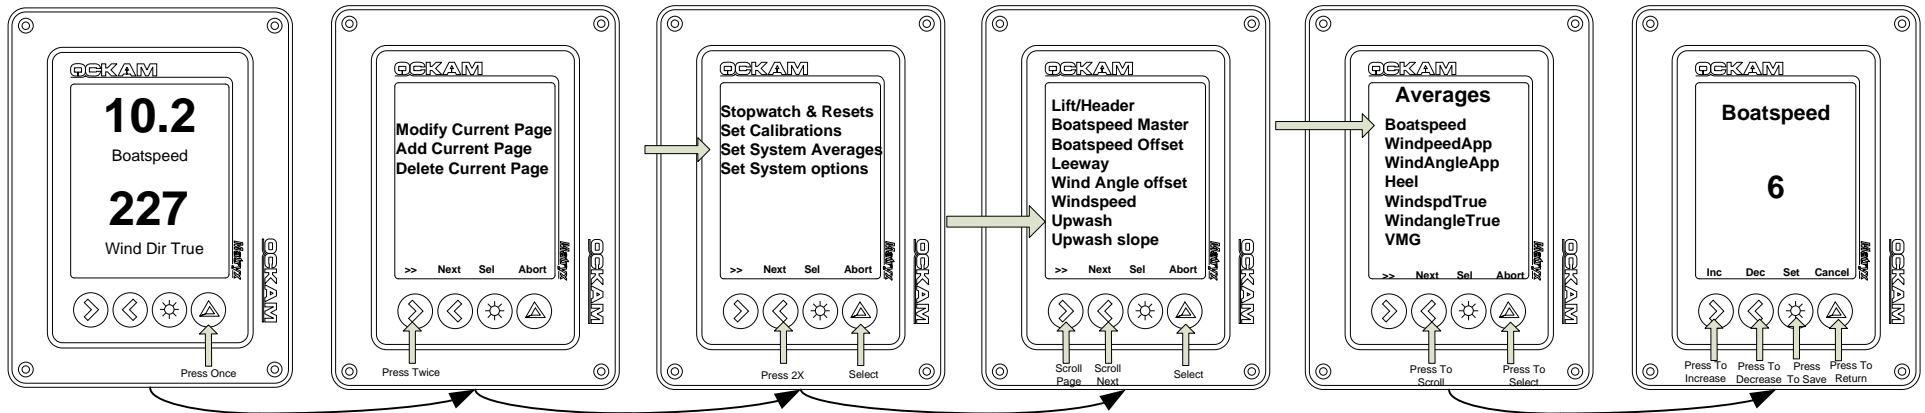


Note:  
Damping pages always start with the default number, not the current value.


# OCKAM

## Matrixx Display Quick Reference Guide

### Add A Stripchart Page

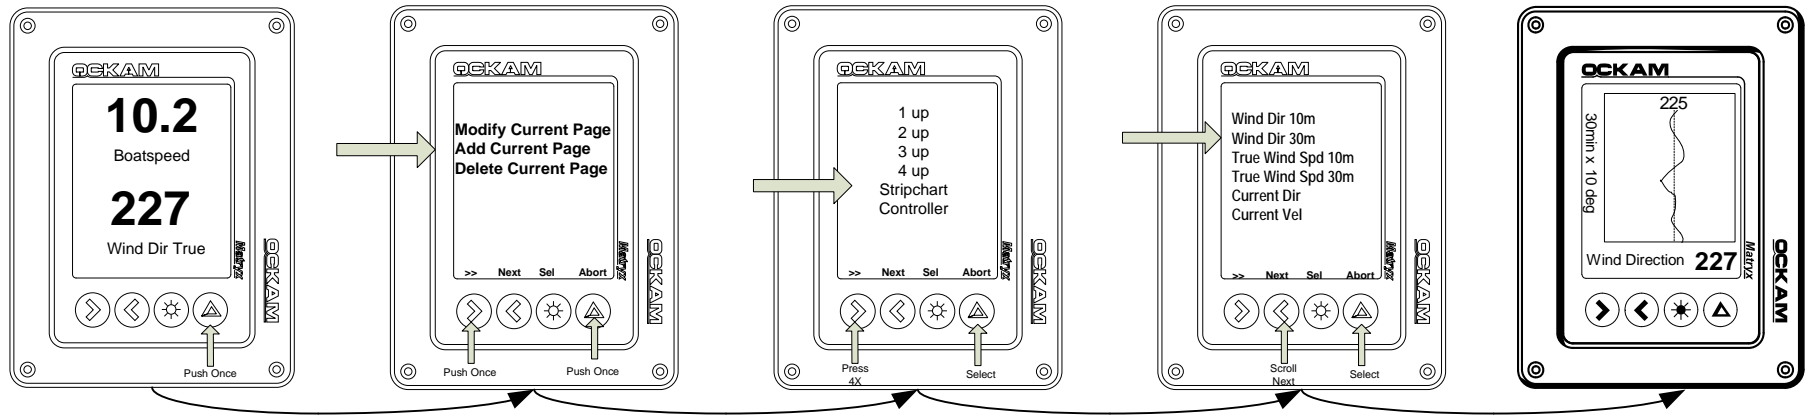

### Set Calibrations

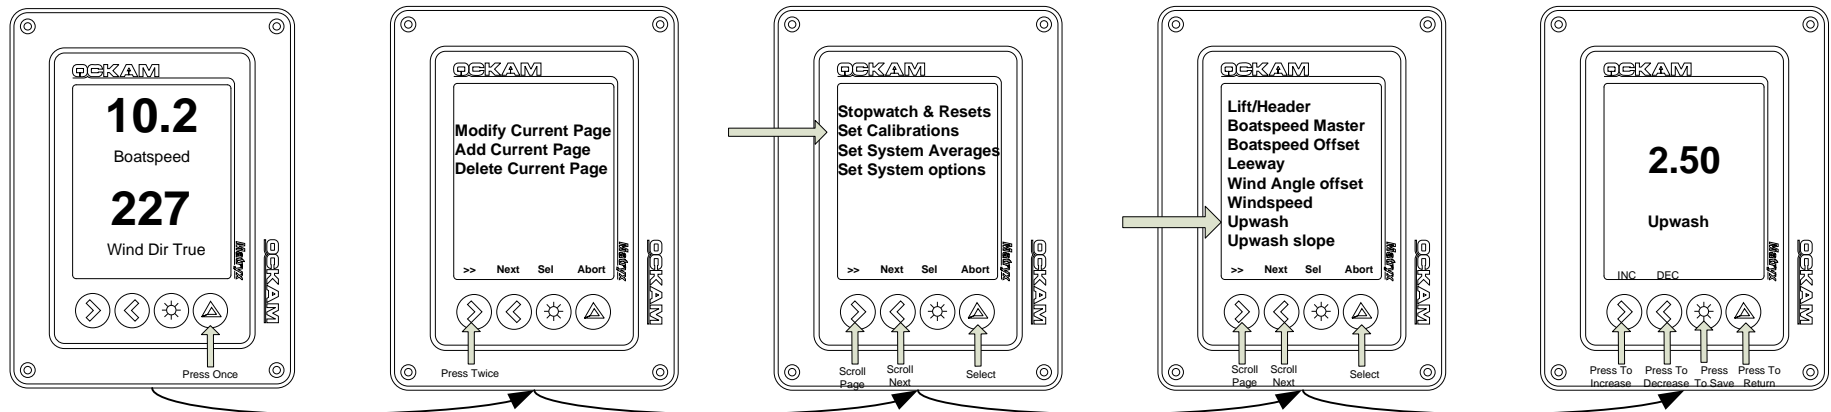

# **OCKAM**

---

26 Higgins Dr.  
Milford, CT 06460  
P 203 877 7453  
F 203 878 0572  
[www.ockam.com](http://www.ockam.com)  
lat@ockam.com